


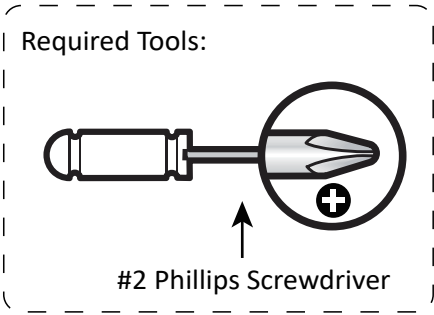
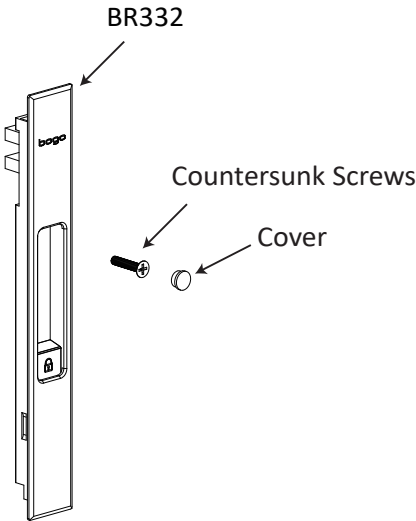


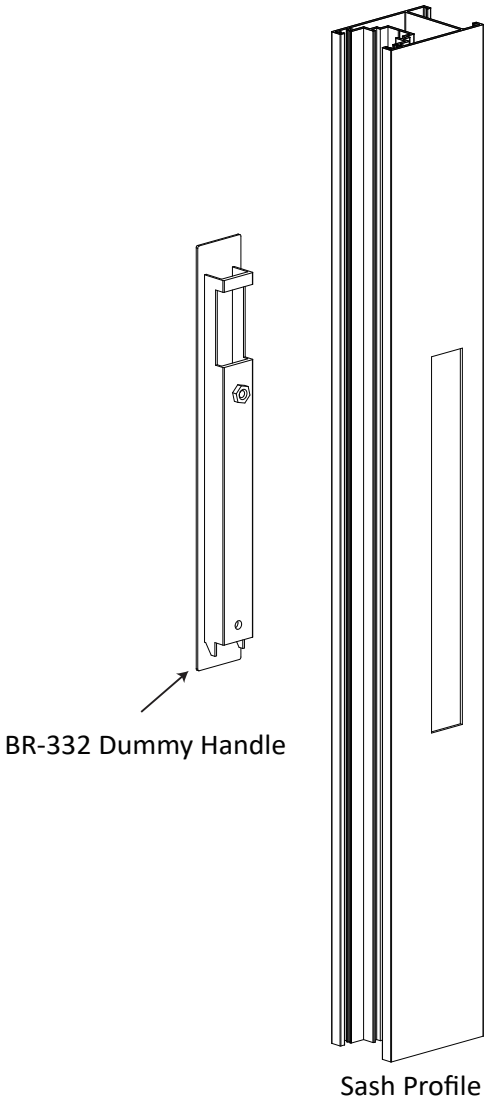

Step 1: Profile Machining

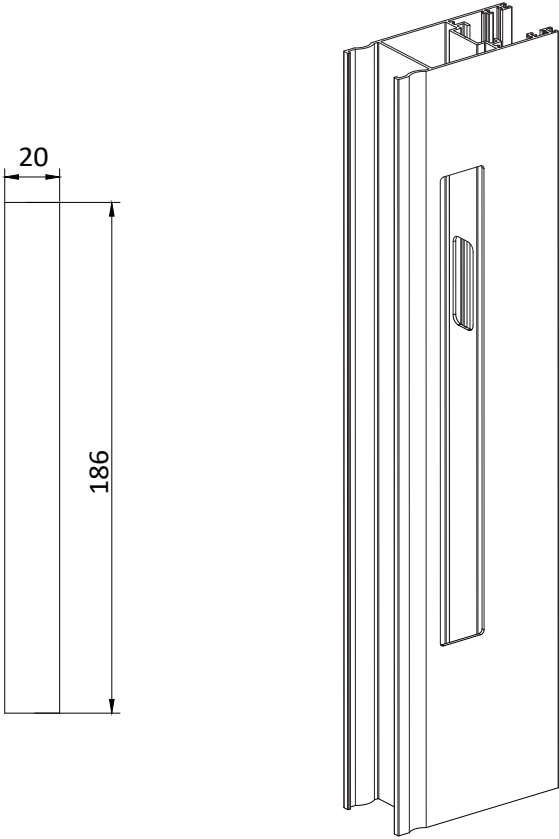

Step 2: Lock & Dummy Handle Installation

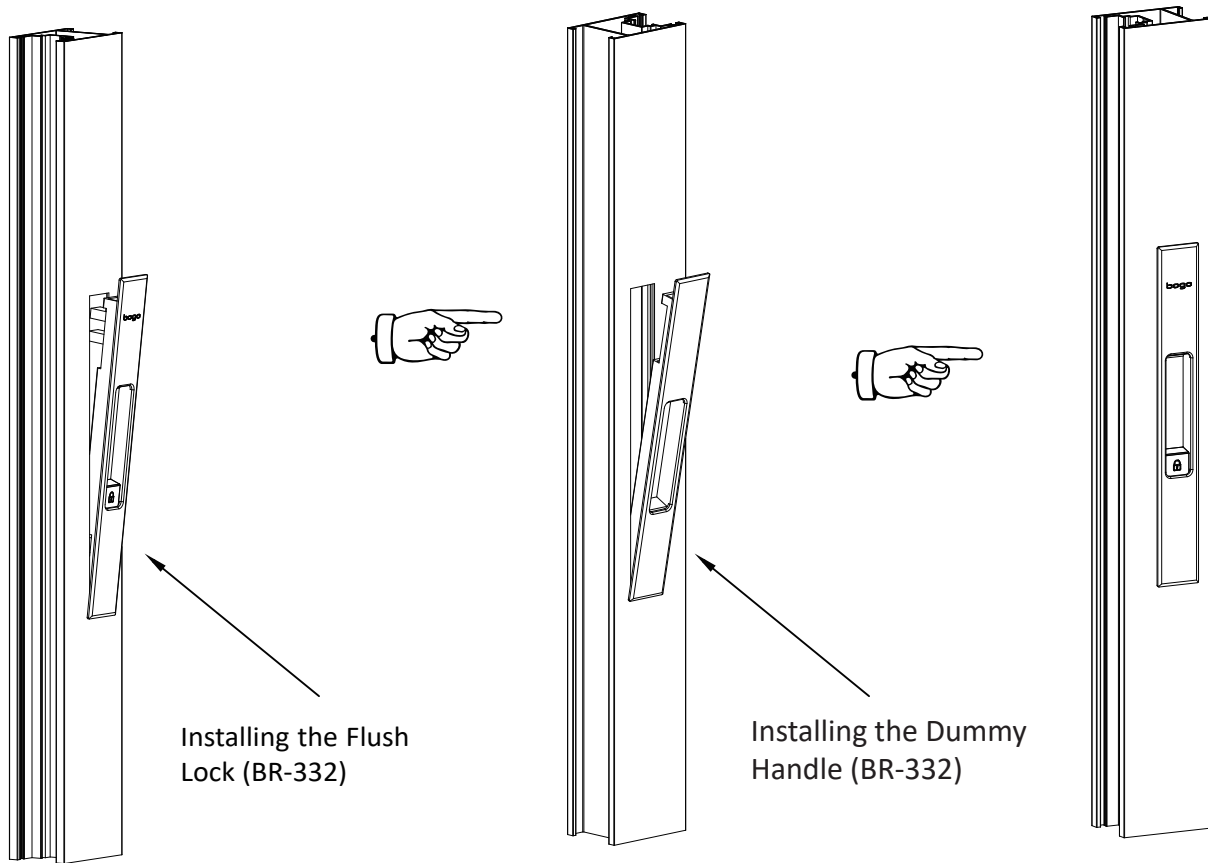

Step 3: Fastening & Cover Installation

